

### ASSEMBLY INSTRUCTIONS FOR POWERSET >THREADED<

MODELS:  
T47\_24  
T45\_24

#### BEFORE INSTALLATION

Use the tools recommended in this manual.  
Do not modify the product in any way that could be a risk to the rider or other people.  
Any modification to the product will void the warranty.  
When in doubt, consult your authorized Bikone workshop or download it from:  
<https://www.bikone.com/downloads/>


#### DURING USE

Check that there is no lateral movement of the crankset and rotate properly.  
Make sure the cranks are properly adjusted and torqued to the manufacturer's recommended torque.  
Do not use brake cleaner when cleaning components or other products that may corrode the materials.  
Do not use carbon paste under any circumstances.

## INSTALLATION

### ATTENTION! CHECK YOUR FRAME

Some frames may have screws in the central part that must be changed for shorter ones or steps that block the interior installation.

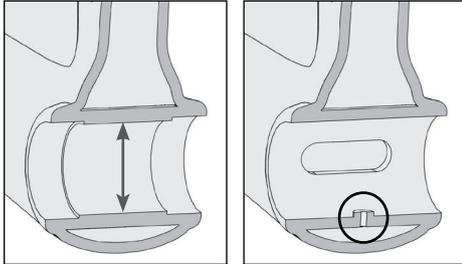


ASSEMBLY WRENCH: BKTOOL PSO1 (INCLUDED IN THE SET)

WE RECOMMEND ANY STANDARD ASSEMBLY GREASE SUCH AS:  
FINISHLINE PREMIUM GREASE / PARK TOOL PPL-1 POLYLUBE 1000 /  
MOBILE 1 SYNTHETIC GREASE / MUC-OFF BIOLOGICAL GREASE / OTHERS


IMPORTANT: DO NOT USE CHARCOAL PASTE UNDER ANY CIRCUMSTANCES

### O1 - Grease the surfaces

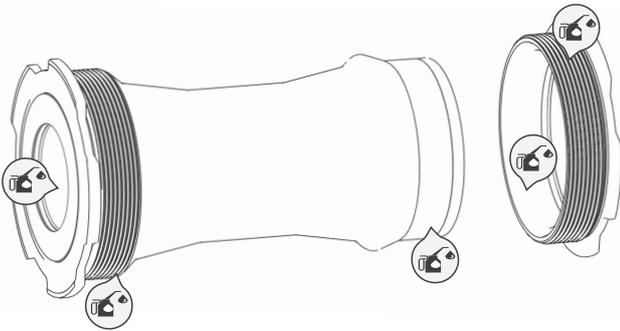


Apply grease to the indicated contact surfaces.  
Including the surfaces in contact with the connecting rod.

### O2 - Install "R" bushing

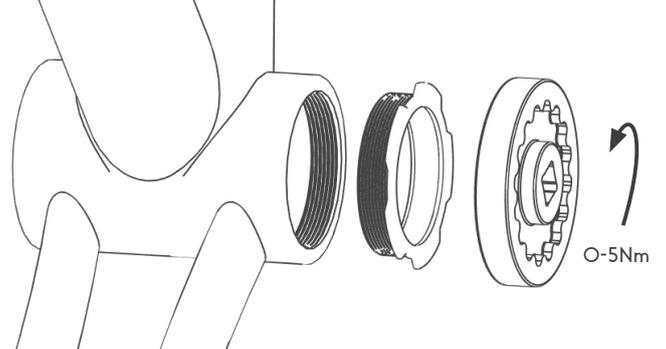


Install the right side.  
With the help of the "assembly wrench" apply up to 5Nm. DO NOT OVERTIGHT.

### O3 - Install "L" bushing

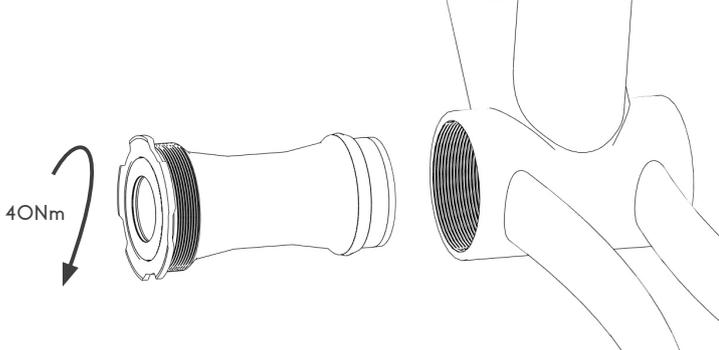

Install Left side  
With the help of the "assembly wrench" apply 4ONm.

### O4 - Install Crankset

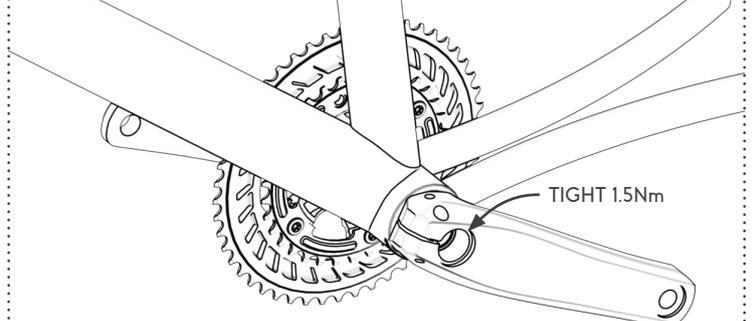


Grease and install the crankset following the manufacturer's assembly steps.  
Important: The tightening of the crankset screw must be 1.5 Nm.  
Important: Make sure that the inner carbon spacer gets in place.

### TOOL REQUIRED

BKTOOL PSO1 (INCLUDED IN THE SET)


[www.bikone.com](http://www.bikone.com)

#### O1 - Remove crankset

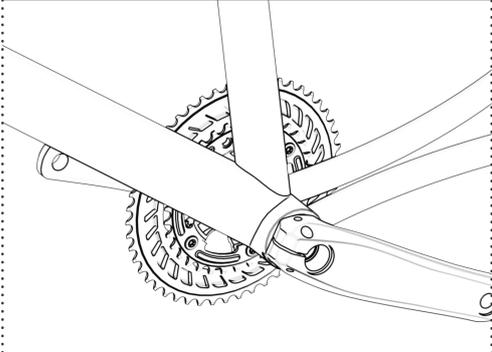


Remove crankset.

#### O2 - Loosen "L"

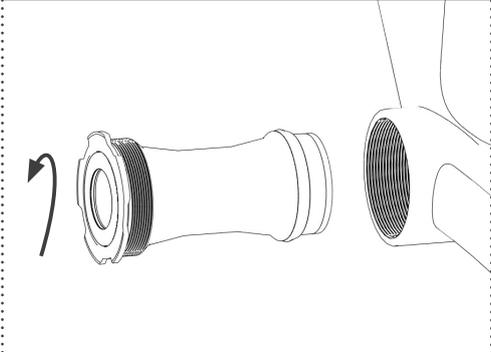

Loosen the "L" bushing.  
DON'T LOOSEN RIGHT SIDE BEFORE LEFT SIDE.

#### O2 - Loosen "R"

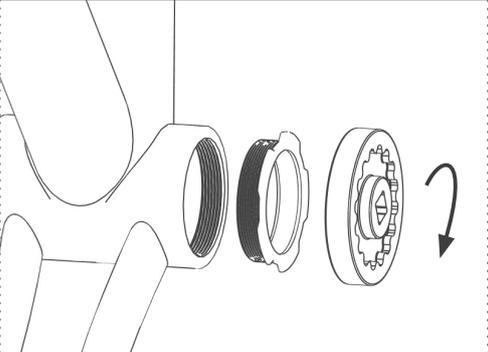

Loosen the "R" bushing.

### WARRANTY

All Bikone bottom bracket axles are guaranteed against product defects for 2 years from the date of purchase.  
This warranty applies to the original owner of purchase and is not transferable to future owners.  
The warranty does not cover damage caused by use of wear parts.  
The warranty does not cover damage caused by improper installation.  
Please consult our website for more information or go to an authorized store.